

Ymer 3 hand unit firmware update

- Use the Ymer 3 USB- stick with specific file structure (file structure available on heden.se/service).
- Transfer the firmware file named "YMER-3.plclect" to the PLC_ELECTRONICS folder of the USB-stick.
- When powered off - insert the USB-stick to the Ymer 3 hand unit.
- Power up the hand unit by long pressing Power and Pair buttons at the same time.
- Ymer 3 will find the firmware and ask if you want to update. Press enter to start the update process.
- When the update is finished press enter to reboot.

VLC 3 firmware update

- Download the "PLC boot loader tool" and firmware files (will only work on a windows PC).
- Connect the VLC 3 to the PC with the lemo to USB programming cable.
- Open the boot loader tool.
- Select the active COM-port in the list in the boot loader tool and press the "open" button.
- Use "select file" and pick the "VLC-3_ver..." file.
- Press "connect".
- Power up the VLC 3 while holding the AUTO button at the same time.
- If the software says its connected – press program and wait until the update is finished.
- If it does not connect, try selecting another COM-port.

